

What to do if ...

List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.



(U.S.A.)

Brake system warning light



(Canada)

Stop the vehicle immediately.



Charging system warning light

Have the vehicle inspected immediately.



(U.S.A.)

Malfunction indicator lamp



(Canada)



SRS warning light



(U.S.A.)

"ABS" warning light



(Canada)



Electric power steering warning light



Pre-collision system warning light^{*1}



(Flashing and then continuously on)

Tire pressure warning light



Brake system warning light

Follow the correction procedures.



Open door warning light



Low fuel level warning light



(On the instrument panel)

Driver's seat belt reminder light



(On the center panel)

Front passenger's seat belt reminder light



(Illuminate no flashing)


















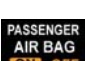


Tire pressure warning light^{*2}



Master warning light

For further information, refer to the Owner's Manual.

See the Owner's Manual

| | | | |
|---|--|---|---|
|  | Turn signal indicator |  | "AFS OFF" indicator ^{*1} |
|  | Headlight high beam indicator |  | Slip indicator |
|  | Automatic High Beam indicator ^{*1} |  | VSC off indicator |
|  | Headlight indicator (U.S.A.) |  | Electronically modulated air suspension indicator ^{*1} |
|  | Tail light indicator (Canada) |  | Eco Driving Indicator Light |
|  | Front fog light indicator |  | "ECO MODE" indicator |
|  | "Hybrid SNOW" indicator |  | EV drive mode indicator |
|  | Cruise control indicator |  | "READY" indicator |
|  | Radar cruise control indicator ^{*1} |  | SRS airbag on-off indicator ^{*1} |
|  | Intuitive parking assist indicator ^{*1} |  | SRS airbag on-off indicator ^{*1} |

For further information, refer to the Owner's Manual.

^{*1}: If equipped

^{*2}: It also turn on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature (the status of the full-sized spare tire, if equipped, is also checked). Adjust the tire inflation pressure.

If the electronic key does not operate properly

n Unlocking and locking the doors



To unlock or lock the vehicle, use the mechanical key (driver's door only). The mechanical key is stored inside the electronic key.

- 1 Locks
- 2 Unlocks

n Starting the hybrid system



- 1 Depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the "POWER" switch.
- 3 Press the "POWER" switch within 10 seconds of the buzzer, keeping the brake pedal depressed.

*: If equipped

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

What to do if ...

If the hybrid system doesn't start

Make sure that the correct operating procedures have been followed.

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the hybrid system.

Steering wheel lock

Make sure that the steering wheel lock is released.

To release it, press the "POWER" switch while gently turning the wheel left or right.

If the hybrid system still does not start, see the Owner's Manual for more information or contact your Lexus dealer.